

Fitting Instructions - Read instructions carefully before fitting and follow them for correct use

IN8016 **ULTI Rack**

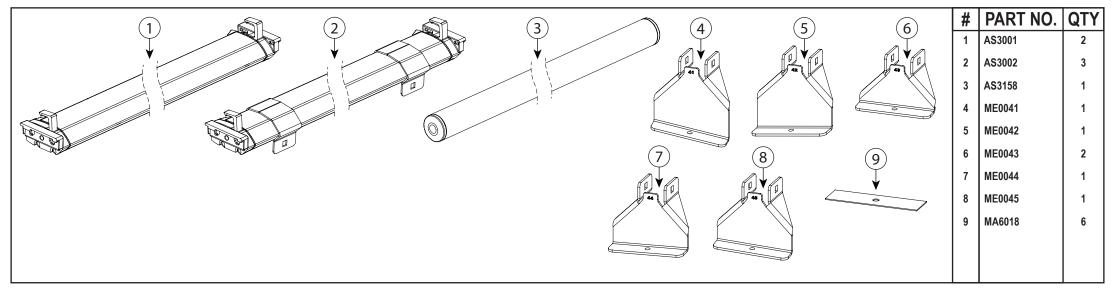

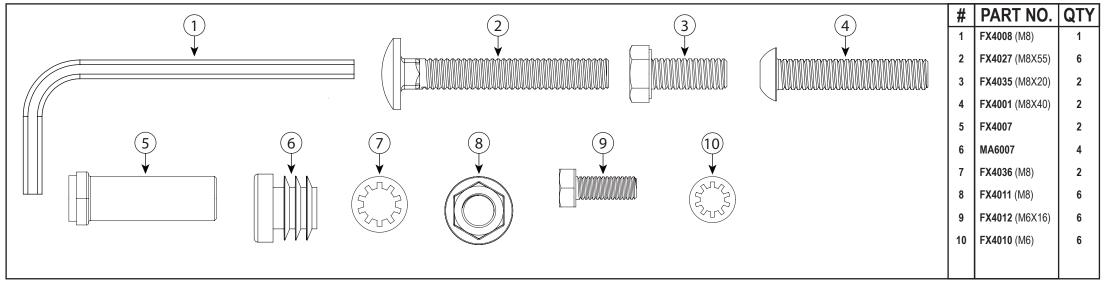






This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD. IN8016 B - IW - 11/03/2016


Van Guard Accessories Ltd Fair Oak Close, Exeter Airport Business Park, Exeter, Devon, EX5 2UL www.van-guard.co.uk


VGUR-041 306mm 306mm 390mm 390mm Vehicle: Citroen Nemo: 2008 on = 19kg Peugeot Bipper: 2008 on Fiat Fiorino: 2008 on Wheel Base: Standard (L1) 2513mm Roof Height: Standard (H1) 340mm 612mm 780mm Rear Doors: Twin 3864mm 1900mm

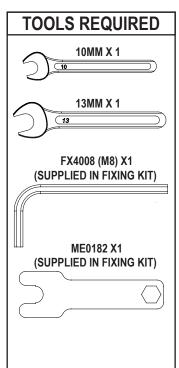


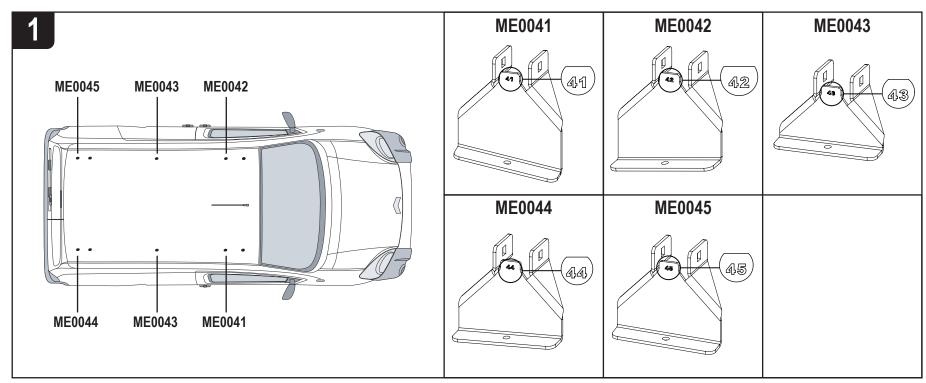


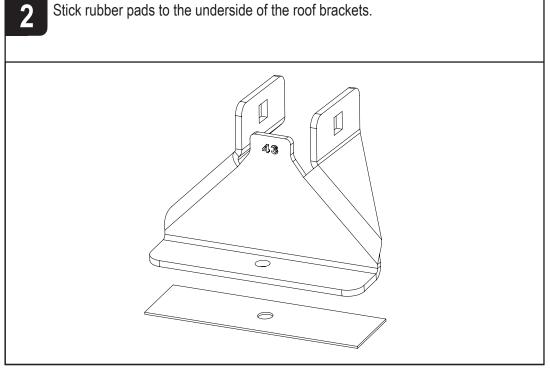


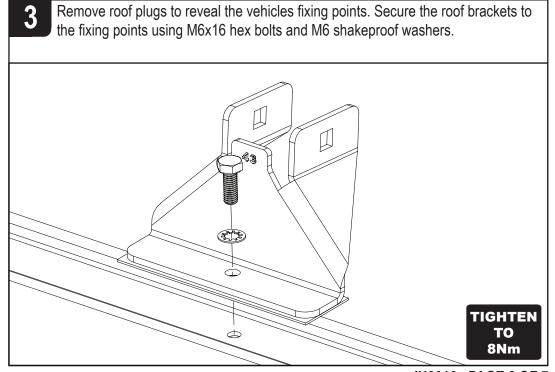

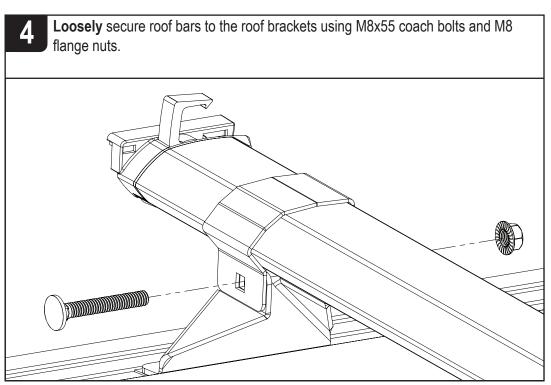


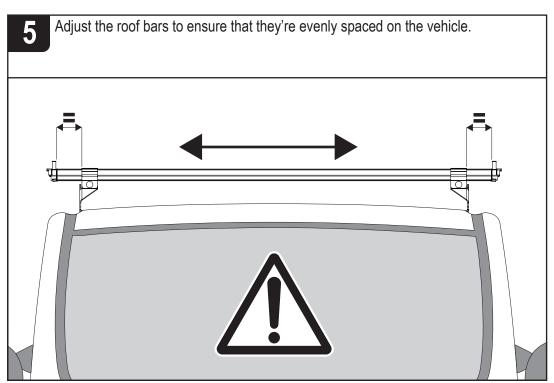


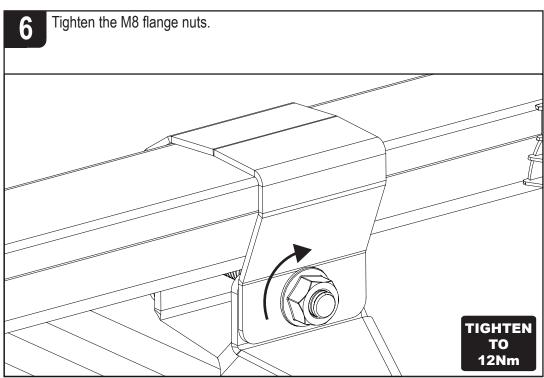


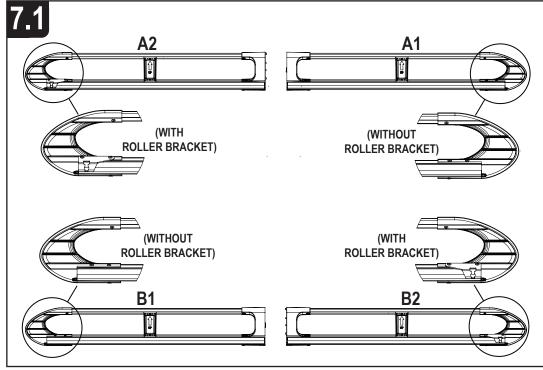


IN8016 - PAGE 4 OF 7

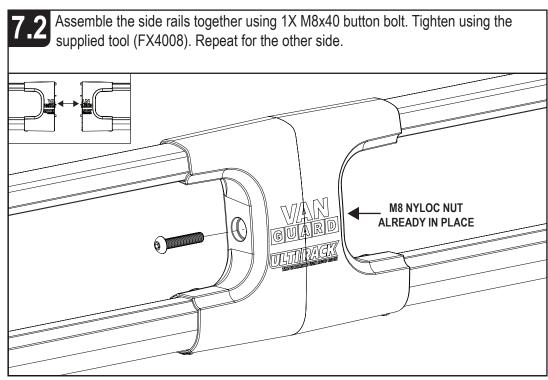


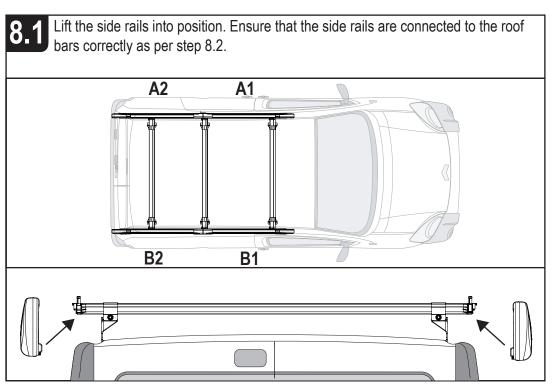

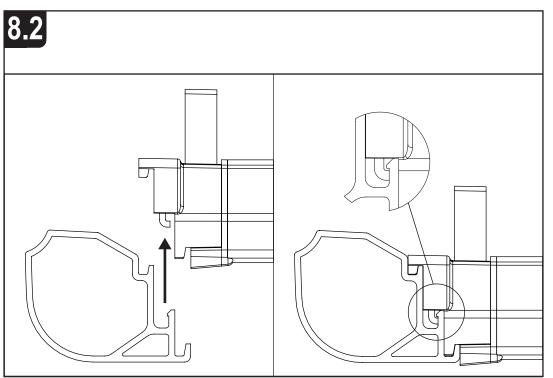


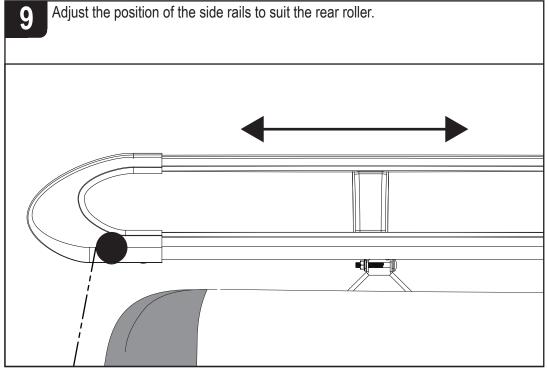


IN8016 - PAGE 5 OF 7

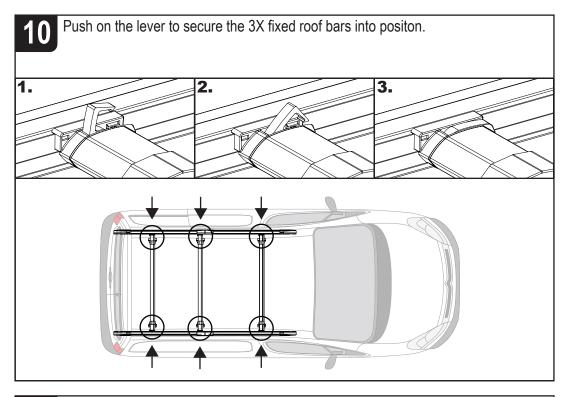


Place the remaining roof bars into position. See page 2 for the recommended distances between the roof bars. Once in position push on the lever to secure in place.

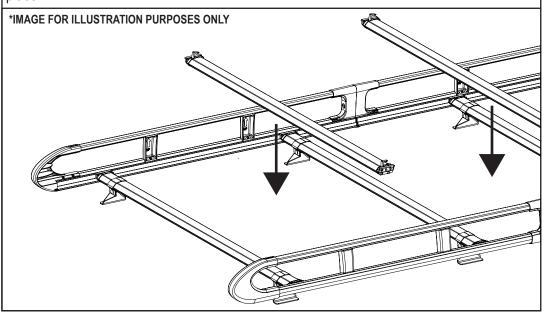



Secure the roller spigot to the **left hand roller bracket only** using a M8x20 hex bolt and a M8 shakeproof washer. Ensure that the shakeproof is on the inside of the roller bracket and that the spigot sits flush / straight. Tighten using the supplied tool.

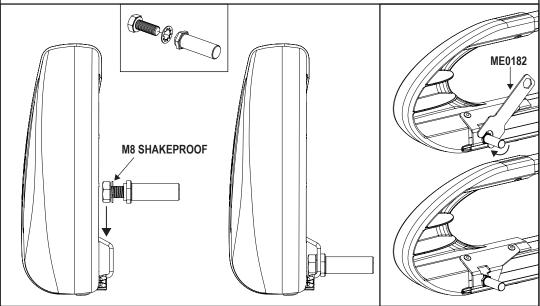

Assemble the roller spigot, M8x20 hex bolt and M8 shakeproof washer together. Place the assembly into the roller. Slide the roller onto the spigot fitted in step 12 and drop the other end into position. Tighten using the supplied tool (ME0182).

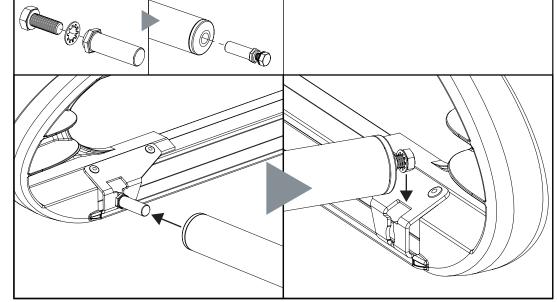

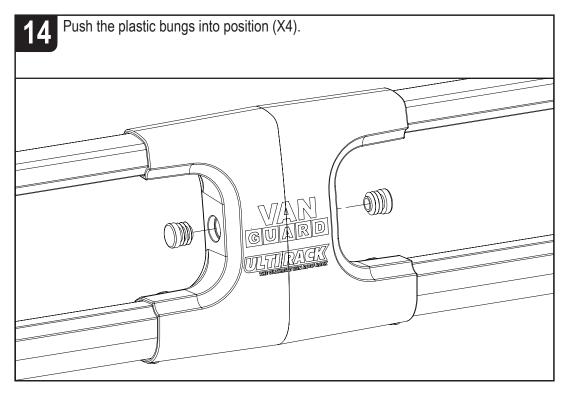

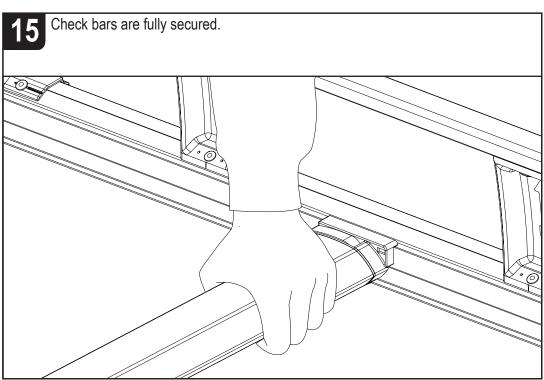

Once fitted check fixings and parts to ensure they have been fully secured and tightened. Regularly check all fixings.



NOTES:

Maximum load capacity: 100KG (Including rack weight - please refer to page 2.) (Maximum load must be in accordance with the vehicle manufacturer's load bearing capacity. Please refer to the vehicles handbook.). Regularly check all fixings.
Retain these instructions for future reference.