
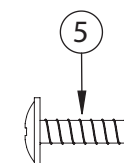

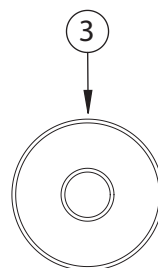
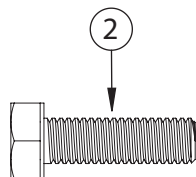


VG312

Parcel Shelf Cover - Ford Transit High Roof 2014 onwards

SUPPLIED COMPONENTS

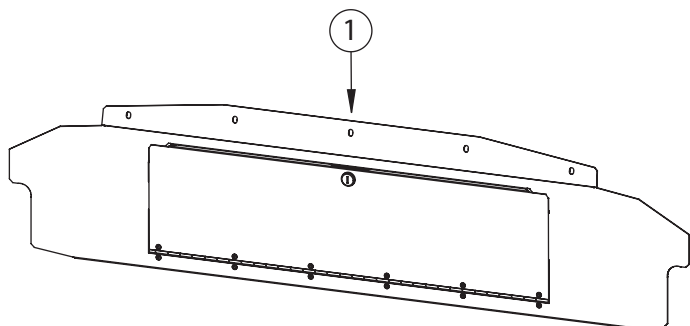

#	DESCRIPTION	QTY
1	PARCEL SHELF COVER	1
2	M6x20 HEX BOLT	5
3	M6X20 WASHER	5
4	M6 SHAKEPROOF	5
5	No8x1/2" SELF TAP SCREW	3

! Whilst every effort has been made to ensure our products can be safely fitted, if any product requires drilling in to the vehicle, we ask you to check that there is no possibility of causing damage when fitting. Make sure drilled holes do not conflict with any wiring, pipes, fuel tanks or spare wheels etc. Changes to the van sometimes occur, so it's always good practice to check before drilling as we cannot except responsibility for any damage caused by the fitting of any of our products. (When drilling always wear safety glasses.)

* Periodically check all fixings.

* Retain instructions for future use.

1 Please read the important notes to the left before fitting this parcel shelf cover.

Step 1: Place the parcel shelf cover in position and loosely secure to the five threaded holes using M6x20 hex bolts, M6 washers & M6 shakeproofs.

Step 2: Open the parcel shelf door and drill 3.2mm through the three holes along the bottom flange. Secure to the pillar using No8x1/2" self tap screws.

Step 3: Tighten all fixings.



TOOLS REQUIRED: 10mm SPANNER / RATCHET, 3.2mm DRILL BIT, DRILL, SCREW DRIVER

This FITTING INSTRUCTION is the property of VAN GUARD ACCESSORIES LTD. and must not be used for manufacturing purposes, copied nor communicated in any way to third parties without written permission from VAN GUARD ACCESSORIES LTD.
IN8185_A - IW - 10/12/2014

Van Guard Accessories Ltd
Fair Oak Close, Exeter Airport Business Park,
Exeter, Devon, EX5 2UL
www.van-guard.co.uk